 


# Palsonic

The AUSTRALIAN Company

## 99cm (39") D-LED TV / DVD Combo WITH DVB-T

### INSTRUCTION MANUAL TFTV3955M

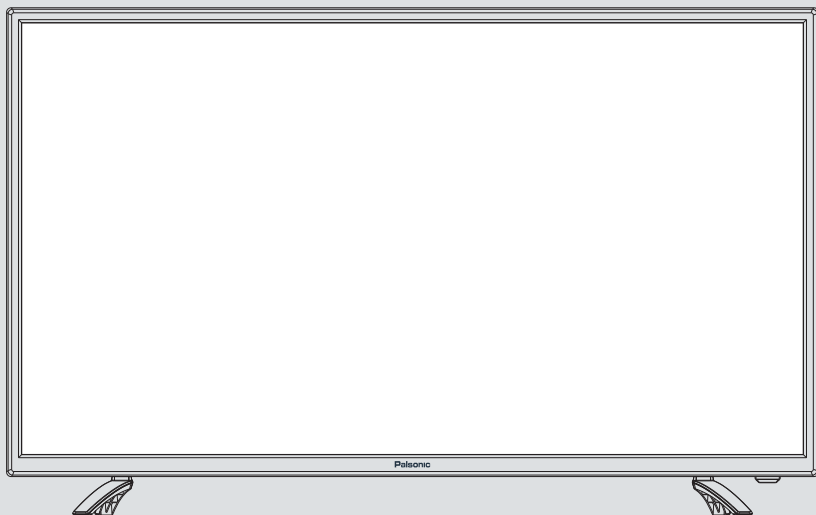

\*Where available

\*Where available

# Table Of Contents


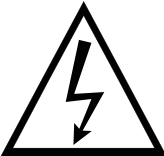 
Preparations Guide	
Safety Information.....	2
Important Safety Precautions.....	3
Installed And Connected TV	
TV Bracket assemble.....	4
TV Buttons And Terminal Interface.....	5
External device connection diagram.....	6
Install And Connect TV.....	7
TV Stand installation Instructions.....	7
Remote Controller.....	8
Function Description	
Picture Menu.....	11
Sound Menu.....	12
TV Channel.....	13
Feature Menu.....	15
Setup Menu.....	16
Multimedia	
Photo.....	18
Music.....	18
Movie.....	18
eBook.....	18
Other Features	
EPG.....	19
PVR.....	20
Other Information	
DVD.....	22
IMPORTANT NOTICE.....	24

# Safety Information

## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

High voltages are used in the operation of this product. to reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personal

	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.</p>
	<p><b>Warning</b> The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>


# Important Safety Precautions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.




- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

## Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.

- 22) The USB terminal should be loaded with 0.5 A under normal operation.

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions. unless you are qualified to do so.

 
- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
- 25) The maximum using environment temperature is 45 degrees.  
The Maximum using altitude is 2000 meters




# TV Bracket assemble

## Fix the TV on the wall


- 1.First,put the TV on the table smoothly and put some soft cloth on the table to avoid scratching the screen.
- 2.Use the screw driver to take off the screws which are fixed on the bottom stand (the direction of the arrow, refer to the photo1).And take off the bottom stand(please take off the screws and bottom stand carefully).
- 3.Make one bracket which can fix on the wall according to the size of arrow direction of photo2 and photo3.
- 4.Drill four holes properly on the wall (the size only for reference) and put into four screws.(optional parts) Drill four holes properly on the wall (the size only for reference) and put into four screws.(optional parts)
- 5.according to the step 4,use the screwdriver to lock the screw on the back of the TV. then hang the TV on the wall.

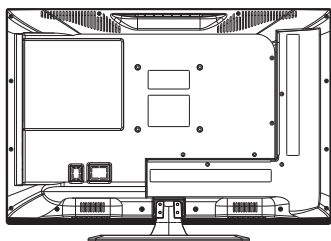


1

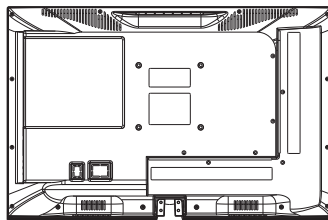 

2

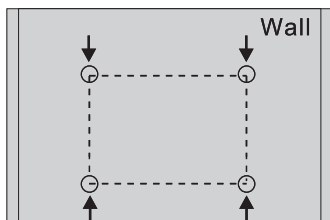 

3

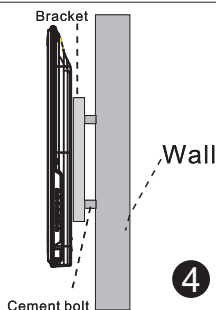 

4


## Note:

 - 1.The bracket fixed on the wall is an optional part.
- 2.When you assemble the TV, there should be no other articles in front, on top, or around the unit and please keep a distance from other articles.
- 3.The fixing picture is only for reference.
- 4.Please follow the users manual about bracket assembly to fix the TV.
- 5.Attach the mounting bracket from the VESA compatible wall mounting kit.

# TV Buttons And Terminal Interface

## TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



: Turn ON/OFF Power.

**SOURCE**: External Signal Input Selection.

**MENU**: Display Main MENU And Confirm MENU Item Selection.

**CH+/-**: Selecting Channel.









**VOL+/-**: Adjusting Volume.

## Terminal Interface

        
Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	<b>AV input</b> External AV Signal Input And Relevant Right/Left Sound Channel		<b>EARPHONE output</b> When earphones are plugged in, speakers are disabled
	<b>COAXIAL</b> Connect the SPDIF receiver.		<b>USB input</b> Connect a USB device here to play its media files or to record programs via the PVR function.
	<b>Y Pb Pr input</b> Connect to the composite terminal of your DVD/VCR (Some models without this interface)		
	<b>HDMI input</b> Digital signal input from HDMI video connector.		
	<b>ANT 75</b> Connect the antenna/cable tv input (75/VHF/UHF)		
	<b>VGA input</b> PC analog signal input		
	<b>PC AUDIO INPUT</b> VGA input and audio input when VGA input		

# External device connection diagram

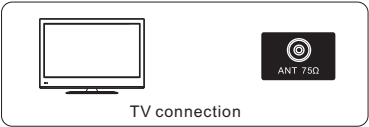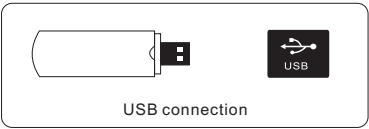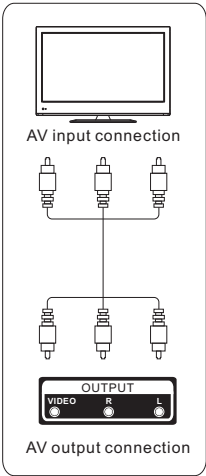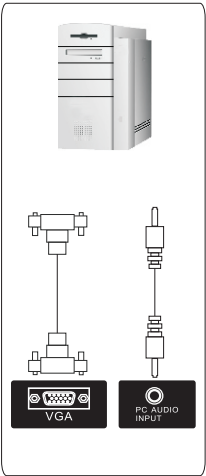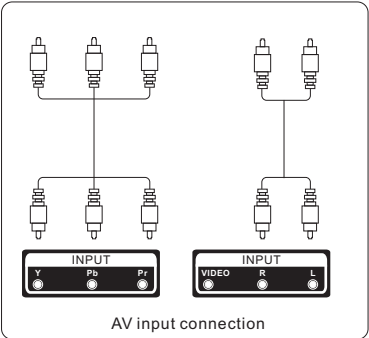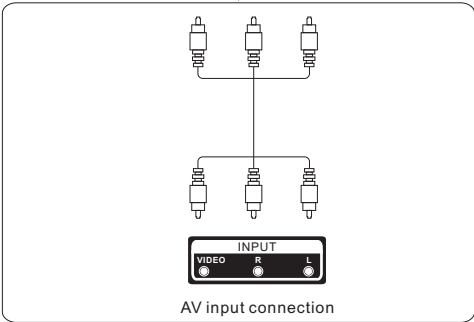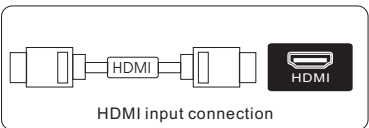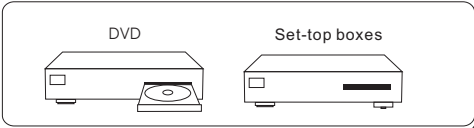


# Install And Connect TV

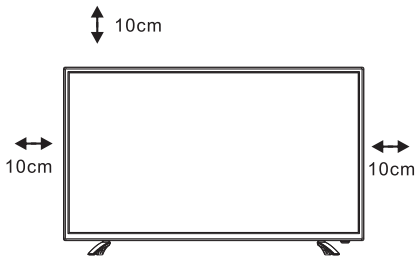 

## Set your TV

To put your TV in a firm place which can bear the weight of the TV.

 To avoid danger, please don't expose the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

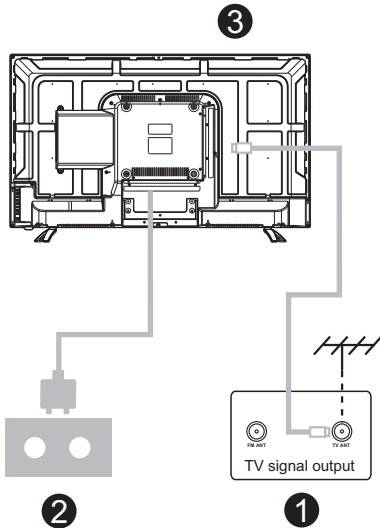

## Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

## Turn on TV

 
3. Press the power button of the TV the indication light will turn to green. if it is on standby mode (the light is red), press the power button on the remote control to turn on the TV.

## Note:

Picture for reference purposes only.

# TV Stand Installation Instructions


1. Open the carton and remove the TV unit and its accessories and feet or (base).
2. To avoid damage to the TV, place face down on a soft surface. Using the screws provided, assemble the TV feet.
3. The installation is complete.

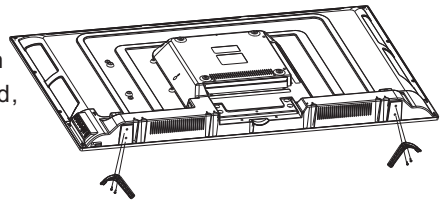

BB4X14(4PCS)

# Remote Controller

 1. **POWER** : Set your TV to power on or standby mode.
2. **MUTE** : Press to mute the sound. Press again or press VOL+ to unmute.
3. **0-9** : Press 0~9 to select a TV channel directly while watching TV. The channel will change after 2 seconds.
4. **DTV/ATV**: Switch between Analog and Digital TV
5. **↶↷** Return to the previous viewed program.
6. **S.MODE**: Press to cycle through the different sound settings
7. **SLEEP**: Select amount of time before TV turns itself off automatically.
8. **MTS** : Press to search the NICAM modes.
9. **P.MODE**: Press to cycle through the different picture settings
10. **MENU**: Open the main menu.
11. **SOURCE**: Press to view and select available input sources
12. **▲▼◀▶ ENTER**: Allow you to navigate the on-screen menus and adjust the system settings to your preference.
13. **EXIT**: Exit from the menu or sub-menu and cancel the current in process (if applicable)
14. **DISPLAY**: Press to display the source and channel's info.

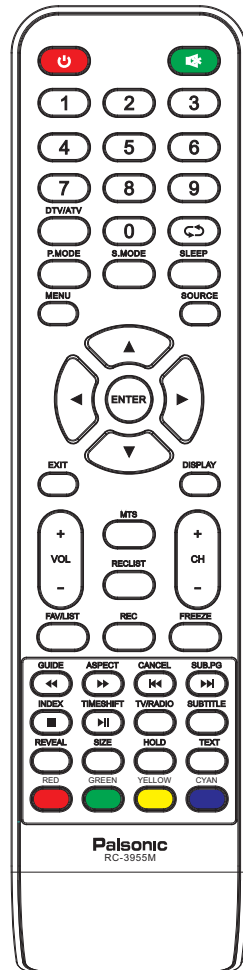


## Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Slide the lid until you hear it click into place.

# Remote Controller

 15. **VOL+/VOL-**: Press to increase / decrease the sound level.
16. **TV/RADIO** : 1.When watching channel, allows you to switch between TV and Radio modes.  
2.Previous chapter in PVR or Media Player mode
17. **GUIDE**:1. Launches the EPG (Electronic Program Guide)  
2. Fast reverse in PVR or Media Player mode.
18. **REC LIST**: list of PVR recordings.
19. **CANCEL**: When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found , the page number will appear at the top of the TV picture, press the CANCEL key to return to the mode of text for you to browse this page.
20. **INDEX**: Request the Index page in Teletext mode.
21. **SIZE**: Change the size of display in Teletext mode.
22. **REVEAL**: Reveal or Hide the hidden words.
23. **COLOR BUTTONS**: In the on-screen menus, these buttons have different functions as specified by the colours shown on-screen. See next page for their DVD-playback functionality.
24. **CH+/CH-** : Press to scan through channels.
25. **FAV/LIST**: 1. press to open the favorite list.  
then you can select the favorite channel.  
2. Next chapter in PVR or Media Player mode.
26. **ASPECT**: 1. Select picture scale.  
2.fast forward in PVR or Media Player mode.
27. **FREEZE**: press to 'pause' the picture (actual broadcast continues in background)
28. **SUB. PG** : Press to access sub page.
29. **SUBTITLE**: To show subtitles when watching DTV (broadcast-dependent)
30. **HOLD**: HOLD On or Off for current page display .
31. **TEXT**: Switch the teletext on and off.
32. **TIMESHIFT**:  
1.DTV channel time shift Function.  
2.Play / Pause during PVR or media playback.
33. **REC**: Begin recording current program to connected USB memory device, in PVR mode

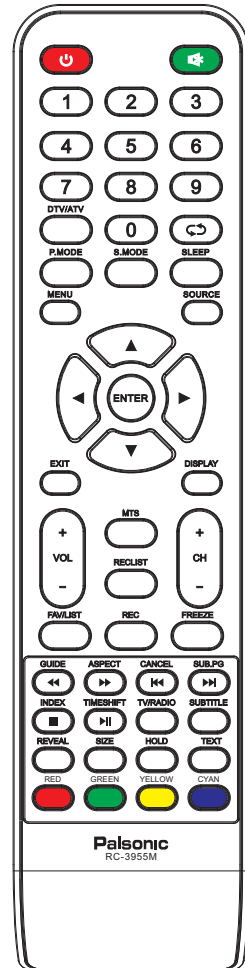


Note: Teletext is not currently broadcast in Australia.

# Remote Controller

 Button functionality when watching DVD  
(Note that some features are disc-dependent):

- 34 ▲ :DVD EJECT
- 35 ►❏ :play /pause DVD program.
- 36 ◀◀ :DVD previous chapter.
- 37 ▶▶ :DVD next chapter.
- 38 ◀◀ :DVD fast reverse.
- 39 ▶▶ :DVD fast forward.
- 40 ■ :stop DVD program.
- 41. **D.setup**:DVD system setup.
- 42. **ZOOM**: in DVD source adjust DVD picture size.
- 43.**Angle**:select DVD picture angle.
- 44.**Audio**:select DVD disc language.
- 45.**Subtitle**:select DVD disc subtitle.
- 46.**D.MENU**: DVD disc menu .press this to access the menu.
- 47.**D.Title**:Press to select the dvd title.
- 48.**GOTO**:play your favorite title/chapter/track.
- 49.**D.DISP**:press to display the source and channel' s info.
- 50.**PROG**:Press this button to change the playback order .It varies according to the different discs.
- 51.**STEP**: Entrance of DVD OSD features.
- 52.**REPEAT**:Repeat playing the title or chapter.
- 53.**A-B**:Whilst watching a DVD, press this button the start and again at the end of a desired section to watch it repeatedly.

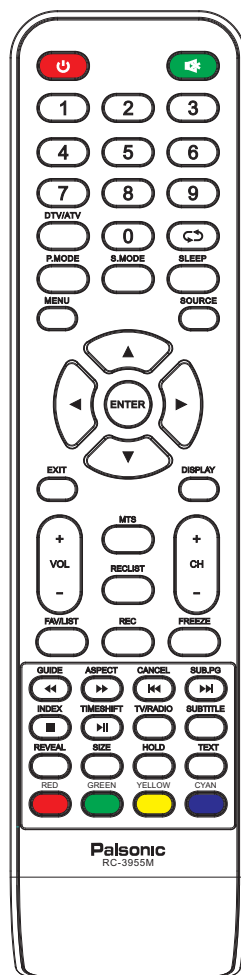

# Function Description

Input

DTV

ATV

AV

YPbPr

HDMI1

HDMI2

HDMI3

PC

Media

DVD

## Select input source

- Press **SOURCE** button to display the input source list;
- Press **▼ / ▲** or **SOURCE** button to select the input source you want to watch;
- Press **ENTER** button to enter the input source;
- Press **EXIT** button to quit;

## Picture Menu

Press **MENU** button to display the main menu.

Press **ENTER/RIGHT** button select Picture in the main menu, then press **ENTER/RIGHT** button to enter



1. Press **UP/DOWN** button to select the option that you want to adjust in the Picture menu.
2. Press **ENTER/RIGHT** button to enter, then press **LEFT/RIGHT** button to adjust.
3. After finishing your adjustments, Press **MENU/ENTER** button to save and return back to the previous menu.

### Picture Mode

Available Picture Mode: Dynamic, standard, mild, user

Note: You can press **P.MODE** button to change the Picture Mode directly.



# Function Description

## Brightness/Contrast/ Sharpness/Colour/Tint

**Brightness** Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture

**Contrast** Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

**Sharpness** Adjust the peaking in the detail of the picture.

**Colour** Adjust the saturation of the colour based on your own personal preference.

**Tint** It is not available unless Picture Mode is set to be user and the current TV system is NTSC.

## Colour Temperature

Change the overall color cast of the picture.

## Aspect Ratio

Change the format of the screen from Zoom 1, Zoom 2, 4:3 and 16:9.

Note: You can press ASPECT button to change the Picture Mode directly.

## Noise Reduction

Noise reduction of the picture. To reduce noise and improve the appearance of the picture. No noise reduction operation if it's "off".

From Low->Middle->High, noise reduction effects better but it will cause a blur on picture.

## Sound Menu

Press **MENU** button to display the main menu.

Press **ENTER/RIGHT** button select Sound Menu in the main menu. then press **ENTER/RIGHT** button to enter



1. Press **UP/DOWN** button to select the option that you want to adjust in the Sound menu.

2. Press **ENTER/RIGHT** button to enter, then press **LEFT/RIGHT** button to adjust.

3. After finishing your adjustments. Press **MENU/ENTER** button to save and return back to the previous menu.

## Sound Mode

Note: You can press S.MODE button to change the Picture Mode directly.

## Treble/Bass/Balance

**Treble** Adjust the treble effect. Increases or decreases high-pitched sounds.

**Bass** Adjust the bass effect. Increases or decreases lower-pitched sounds.

**Balance** Adjust the balance between left and right speakers to adapt to your listening position.

## Surround

Press **ENTER/RIGHT** button to enter, then press **UP/DOWN** button to select On or Off.

## AVL

press **UP/DOWN** button to select On or Off. Set the auto volume control.

## SPDIF

 
Press **ENTER/RIGHT** button to enter, then press **UP/DOWN** button to select Off / Auto / PCM.

# Function Description

## TV Channel

Press **MENU** button to display the main menu.

Press **ENTER/RIGHT** button select Channel Menu in the main menu, then press **ENTER/RIGHT** button to enter

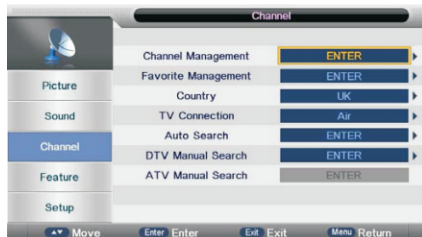

1. Press **UP/DOWN** button to select the option that you want to adjust in the Channel menu.
2. Press **ENTER/RIGHT** button to enter, then press **LEFT/RIGHT** button to adjust.
3. After finishing your adjustments, Press **MENU/ENTER** button to save and return back to the previous menu.

## Channel Manager

The operation interface show as follow .



# Function Description

## Favourite Management

To manage (Add/Delete) Favourite channels



Press UP /DOWN button to select the programs to be added into favourite list and press "RED", "GREEN", "YELLOW" or "BLUE" button to mark them

## Country

press UP/DOWN button to select Country.

## Auto Search



**All Mode:** Select "All" item to scan all digital channels carried by current signal mode firstly and then switch to scan all analog channels in selected country automatically. User can skip digital search to analog search directly by entering EXIT/MENU button and can also stop auto scan directly by entering EXIT/MENU button during analog scanning.

**Digital Mode:** Select "Digital" item to search all digital channels in selected country carried by current signal mode. User can stop search directly by entering EXIT/MENU button.

**Analog Mode:** Select "Analogue" item to search all digital channels in selected country carried by current signal mode. User can stop search directly by entering EXIT/MENU button.

 
# Function Description

## DTV Manual Search



Select channel number by **ENTER/RIGHT** button or entering number directly. The strength and the quality shows at the bottom, Press **ENTER** button on "Start" item to start current channel search. The manual searching UI and the auto searching UI are the same.

## ATV Manual Search

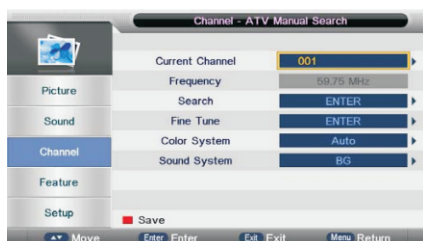


Press **UP/DOWN** button to select option. Press **ENTER/RIGHT** button to enter, Press **UP/DOWN** button to select these parameters. Select "Search" item to enter analog channel tune, then press **LEFT/RIGHT** button to adjust.

## Feature Menu

 Press **MENU** button to display the main menu.

Press **ENTER/RIGHT** button to select Feature Menu in the main menu, then press **ENTER/RIGHT** button to enter

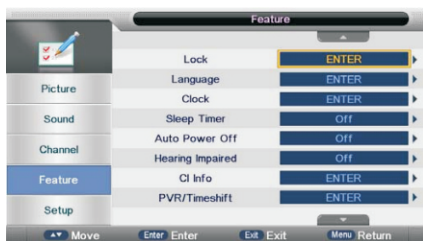

1. Press **UP/DOWN** button to select the option that you want to adjust in the Feature menu.
2. Press **ENTER/RIGHT** button to enter, then press **LEFT/RIGHT** button to adjust.
3. After finishing your adjustments, Press **MENU/ENTER** button to save and return back to the previous menu.

# Function Description

## Lock

**Lock Channel:** On: turn on Lock Channel. User need to enter password to watch the channels which are locked. Also need to enter password when user tries to change settings in items like "reset system"/"reset database" etc.

Off: turn off Lock Channel

**Parental Lock :** Off: turn off Parental Lock

4-18: turn on Parental Lock and set the age level that are permitted to watch the program.

**Change Pin Code :** Press **ENTER/RIGHT** button to set New Password, then enter a 4-digital number you want to set twice.

## Language

Press **UP/DOWN** button to select Language. 2. Press **ENTER/RIGHT** button to enter, then to select System language setting, includes OSD Language, Preferred Subtitle, Preferred Audio, Digital Teletext Language, Anglog Teletext Language

## Clock

It is used to check out the current system time and set time zone/DST. (DST(daylight saving time): if it's " On " , it'll be an hour earlier than the GMT. If Time Zone is set to "Auto" it's not available. )

## Sleep Timer

When your TV is Running, start sleep function by setting Sleep Timer in any case. This function allows you to power off the TV within a period of time. Currently the supported time period are: Off, 10 Mins, 20 Mins, 30 Mins, 60 Mins, 90 Mins, 120 Mins, 180 Mins, 240 Mins,

## Auto Power Off

When your TV is Running, start Auto Power Off function by setting Auto Power Off Timer in any case. This function allows you to power off the TV within a period of time. Currently the supported time period are: Off, 1 Hours, 2 Hours, 4 Hours .

## Hearing impaired

This function offers a subtitle such as a "stroke on the door" or "the bell starts to ring" for the current scene in case that the user is weak in hearing.

## CI Info

It is only available in DTV source when PVR is not playing. Please refer to Chapter 6 section 2 CI Setup for further information about the function of CI.

## Setup Menu

Press **MENU** button to display the main menu.

Press **ENTER/RIGHT** button to select Setup Menu in the main menu. then press **ENTER/RIGHT** button to enter



1. Press **UP/DOWN** button to select the option that you want to adjust in the Setup menu.

2. Press **ENTER/RIGHT** button to enter, then press **LEFT/RIGHT** button to adjust.

3 After finishing your adjustments Press **MENU/ENTER** button to save and return back to the previous menu

 
# Function Description

## OSD Timer

Set up OSD Timer which means how long the menus will exist. The optional periods are 5, 10, 15, 20, 25, 30 Seconds and Never

## PC Setup

It is only available in PC source.

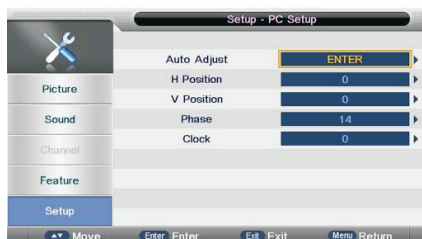

Auto Adjust: Auto Adjust the H Position, V Position, Phase, Clock

H Position: Manually adjust H Position

V Position: Manually adjust V Position

Phase: Manually adjust Phase

Clock: Manually adjust Clock

## Blue Screen

It is not available in PC, DTV source or when it is not movie mode in multimedia source. In TV source, if there is no signal and Blue Screen is Off, it will show snow; if there is no signal and Blue Screen is On, it will show blue screen

## Reset to Setting

If the Lock Channel is On in Feature Menu/Lock, it needs to enter the password to enter the Reset. It will Reset System Setting and Database. When the reset is complete, it will enter the Auto Installation settings page.

First, it will show a page to user to confirm, as follow:

 
## Software Upgrade

Software upgrade by bin code. Put The bin code into the root directory of the media and media plugged into the TV's USB interface, press **ENTER** key to upgrade. Don't power off during the upgrading process. The system will restart when the upgrading process is done.

# Multimedia


## Photo

press **LEFT/RIGHT** button to select PHOTO in the main menu, then press **ENTER** button enter photo page,

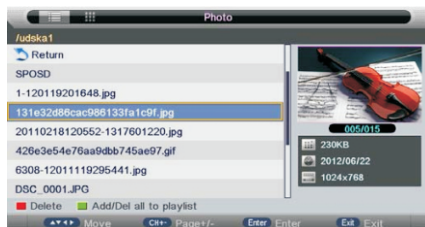


## Music

 press **LEFT/RIGHT** button to select Music in the main menu, then press **ENTER** button enter music page.

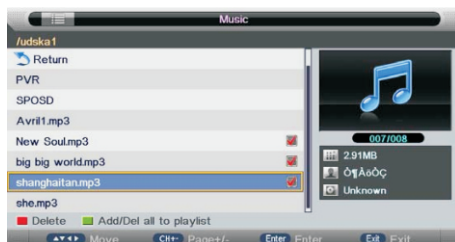

## Movie

 press **LEFT/RIGHT** button to select Movie in the main menu, then press **ENTER** button enter Movie page.

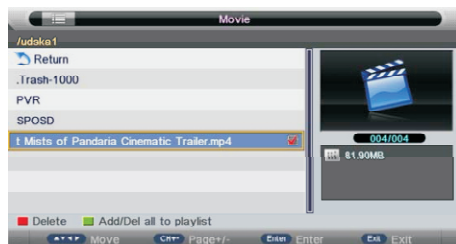

## eBook

Only txt format eBook is supported.

press **LEFT/RIGHT** button to select eBook in the main menu, then press **ENTER** button enter eBook page.



# Other Features

## EPG

If you expect to know the schedule or the information of the current playing program or the program that starts in the near future, you can refer to the EPG menu by pressing the button "EPG" on the remote. It shows the date and time on the top right of the menu, the list of the current available channels on the left side of the menu, and the name of each program that starts in a scheduled period of time on the right of the menu. Change the focused list by pressing "right" or "left", or the focused program by pressing "up" or "down". The information of the currently focused program will be displayed on the top of the menu.

There are 3 modes of EPG menu :

Daily mode : shows the information of the programs to be broadcasted in daily mode :

Weekly mode : shows the information of the programs to be broadcasted in weekly mode :

Extended mode: shows the detailed information of each program :

### Daily Mode

Display the information of the programs that start in a scheduled period of time in the current channel. It includes name, start time, end time, short content description, current date/time, etc.

If the current focusing program is not parental locked, it will be played simultaneously in the background.



 
EPG Daily Mode

### Weekly Mode

Display the information of the programs that start in a scheduled period of time in the current channel. It includes name, start time, end time, short content description, current date/time, etc.

Focusing on different channels on the left, it displays corresponding programs in schedule of time.

If the current focusing program is not parental locked, it will be played simultaneously in the background.

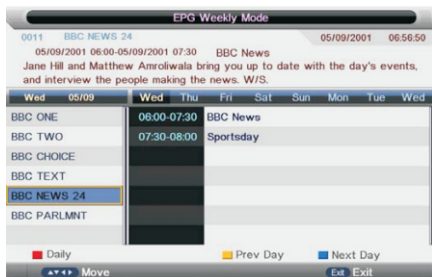


EPG Weekly Mode



# Other Features
 
## EPG

### Extended Mode

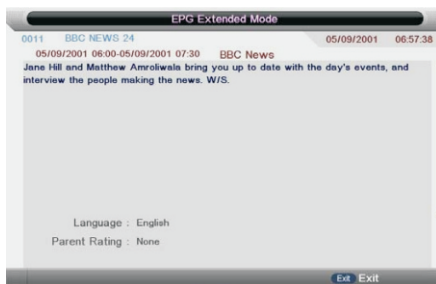

## PVR

This section is to introduce some contents about PVR, including PVR involved menus, Recording flow, Recorders playback, Recording restrictions.

PVR involved Menus: PVR/Timeshift menu, Partition List menu, Timer menu, Timer Edit menu, Record List menu, REC info menu, Timeshift info menu.

## REC

Press **REC** button to start recording, when there is a program playing, it will pop up a message "Do you want to start Recording?". After confirm, the system will read the speed of the storage device. If the speed is too low for recording, there is a message "Device speed not enough, RECORD anyway?" if user choose Yes, it will record constrainedly. In addition, the speed is high enough, it initializes in the first instance and starts to record later.



## Timer REC

There are two methods to set a timer, As follows:

In the EPG menu user can preengage programs for watching or recording;

Pressing **GREEN** once is to preengage the program only for watching (when timeout, it jumps to the program and only play.

Pressing **GREEN** twice is to preengage the program for recording (when timeout, it jumps to the program and starts recording). if it is timeout in standby mode, it will power on 2 minutes in advance and starts to record under background without powering on the panel. To watch the program, user need to press **POWER**;

The preengaged programs can be checked in Timer menu.

# Other Features

## PVR



In Timer menu, user can increase, delete preengage programs; In Timer Edit menu, user could set modify preengaged programs' information;

In Timer menu: press **YELLOW** to get into Timer Edit menu to add a timer. Then set timer's information in Timer Edit menu.

Flow of setting a timer's information :

Type: Set program type :DTV or RADIO;

Mode: Way of triggering a timer(once/daily/weekly/monthly);

Recorder:"ON": preengage for watching and recording(record). "OFF": preengage only for watching(reminder);

 
Set the date/time and Duration time (exact to minutes) : Must be reasonable (behind current time);

Timer: when there are some conflicts a warning message will pop up;

Press **MENU** to return to Timer menu and store the timer's information.



When the timer recorder is timeout, it jumps to the very channel and starts to record the program automatically.(if a manual recording is under process, it will stop the manual recording process and starts the timer recorder automatically).When there is left 10s before recorder , a prompted window will pops up;

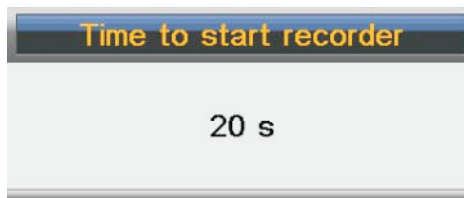

If there are not any storage media, the settings fail and a warning message "no USB device" shows;


If target partition (default partition) is not set, it selects the first partition that the system identified automatically.

# DVD Setup

 Press the “D.Setup” button to enter the DVD settings menu, use the left-hand or right-hand arrow buttons to select the desired menu page (General/Audio/Video/Preferences), and use the up and down arrow buttons to select the items in each menu, then use the right-hand arrow button to enter the selected item. If you then change any setting, press “ENTER” button to confirm the value you changed, press the left-hand arrow button to return to the left submenu; to go back up to one of the main DVD menu pages, press the “EXIT” button.


## 1. General setup page

OSD Language: Set the language of the setup menu and screen display.  
Screen saver; set the screen protection.  
Last Memory: Remember and resume from the position of the previous playback.

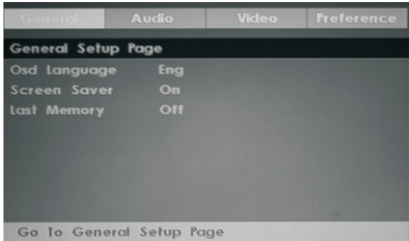

## 2. Speaker setup page

 Downmix: This is DVD L/R and stereo output, default as stereo output.

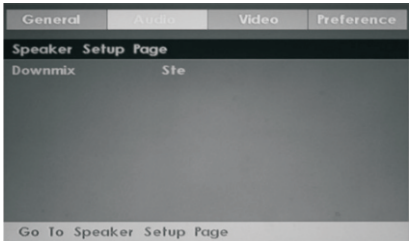


# DVD Setup

## 3.Video setup page

Sharpness: adjust the sharpness of the image.

Brightness: adjust the brightness of the image

 Contrast: adjust the contrast of the image

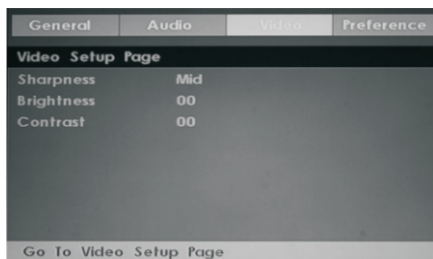

## 4.Preference page(Note: This menu page will pop up before put the disc into DVD)

TV type : Select the local TV system (PAL TV/ Mult/NTSC TV)

Audio : Disc audio language selection ( disc dependent)

Subtitle: Disc subtitle language selection(disc dependent)

 
Disc Menu: Disc Menu language selection( disc dependent)

Parental: Set the maximum disc rating ( Kid safe/G/Pg/Pg 13/Pgr/R/Nc 17/Adult) that can be viewed without a password.

(default password is 0000)

Password change the password

Default: Choose this to restore the original default Preference settings

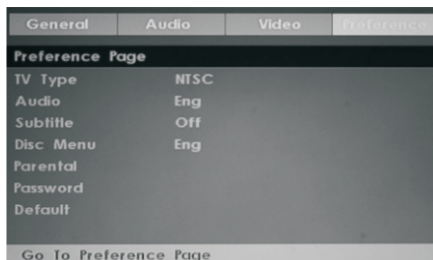

## IMPORTANT NOTICE

This LCD/LED TV panel is comprised of up to 6 million cells which are called pixels. It is not uncommon, in fact quite usual, for a few pixels to be bright and/or dark in the manufacture of this panel. In line with world wide common practice industry standards, it is deemed normal and acceptable for some pixels to be dead. This means that they may either be dark dead pixels [shown as black dot on panel] or can be bright dead pixels [shown as white dots on panel]. Panels with up to 6 dead pixels, dark and/or bright, that appear within a 12 month period, comply with normal industry standard and Palsonic Corporation Pty Ltd reserves the right not to repair or exchange the unit and offer no refund for this occurrence.

★ LIFE TIME : 60,000 Hrs

# **Palsonic**

**The AUSTRALIAN Company**

Palsonic Customer Service  
Telephone (Australia) 1300 657 888

Palsonic Corporation Pty Ltd ABN 34 000 474 108  
1 Joynton Avenue, Waterloo NSW 2017 Australia

Telephone (02) 9313 7111 Facsimile (02) 9697 0655  
[www.palsonic.com.au](http://www.palsonic.com.au)

